

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK ECU TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....) F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION																																															
HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF																																															
Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT
ALTIM A	L31	2001	SC	D	T	SC																																									
		2002	F1	SC	D																																										
		2003	F2	D	T	SC																																									
		2004	F3	F1	F1	D																																									
		2005	F4	F2	F2	T																																									
		2006*	F7	F3	F3	F1																																									
ALTIM A	L30	1997	SC	D	T	SC																																									
		1998	F1	SC	D																																										
		1999	F2	D	T	SC																																									
		2000*	F3	F1	F1	D																																									
		F4	F2	F2	T																																										
		F7	F3	F3	F1																																										
ALTIM A Hybrid	L32	2007	SC	D	T	SC																																									
		2008	F1	D		SC																																									
		2009	F2	T	SC																																										
		2010	F3	SC	F1	D																																									
		2011	F4	D	F2	T																																									
		F7	F1	F3	F2	CD	D	D																																							
ARMA DA	TA60	2003	SC	D	T	SC																																									
		2004	F1	SC	D																																										
		2005	T	SC	D																																										
		2006	F1	SC	D																																										
		2007	F2	D	T	SC																																									
		2008	F3	F1	F1	D																																									
		2009	F4	F2	F2	T																																									
		2010	F7	F3	F3	F1																																									
		2011	F8	F7	F7	F2	CD	F1	D	D																																					

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: **S:**Sys. Info **C:**DTC→Read code & Clear code **D:**Data Stream **T:**Action Test **E:**Special Functions(E1 E2 E3 ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS/RAS/HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Breaker	Autoslid	CAN GATEWA	POP UP HOOD	Total ILLU	OCCUPANT	MULTI DISP	SVT
INFINI TI M35/M45	Y50	2005	SC	D																																											
		2006	T	SC	SC																																										
		2007	F1	D	D																																										
		2008	F2	F1	T																																										
		2009	F3	F2	F1	SC																																									
		2010	F4	F3	F2	D																																									
			F7	F7	F3	T																																									
			F8	F8	F7	F2	CD	SC																																							
INFINI TI M37/M56	Y51	2010	SC	D																																											
		2011	T	SC																																											
			F1	SC	D																																										
			F2	D	T	SC																																									
			F3	F1	F1	D																																									
			F4	F2	F2	T																																									
INFINI TI M45	Y34	2003	SC	D																																											
		2004	T	SC	D																																										
		2005	F1	SC	D																																										
			F2	D	T	SC																																									
			F3	F1	F1	D																																									
			F4	F2	F2	T																																									
INFINI TI Q45	FY33	1995	SC	D																																											
		1996	T	SC																																											
		1997	F1	SC	D																																										
		1998	F2	D	T	SC																																									
		1999	F3	F1	F1	D																																									
		2000	F4	F2	F2	T																																									
		2001	F7	F3	F3	F1																																									
			F8	F7	F7	F2	CD	SC	D	D	D	F3	T	F2	F7	F2	CD	T	D	F2	F7	T	CD	F2	F2	SC	F7	F2	F2	F2	F2	F2	F2	SC	D	F2											

Nissan V41.80 Diagnostics List (Note:For reference only)

(once only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S: Sys. Info C:DTC—Read code & Clear code D:Data Stream

T:Action Test E:Special Functions(E1 E2 E3 ...)

ILLUSTRATION: S:Sys. Info. C:DTC-Read code & Clear code D:Data Stream I:Action Test F:Special Functions(F1, F2, F3,...)

F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

nce only

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF .

Nissan V41.80 Diagnostics List (Note:For reference only)

Note: For reference only

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream E:Action Test F:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....) F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION																																															
HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF																																															
Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT
ATLEON	TK0	1999 2001 2004	SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
ATLEO N(ZD30)	TK0	2006 2010	SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
ATLEO N(exc ept for ZD30)	TK0	2006 2010	SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
CABST AR	TLO	2003	SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT	
			SC	D	T	SC	F1	SC	D	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UP A NT	MUL TI DISP	SVT		

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: **S:**Sys. Info **C:**DTC--Read code & Clear code **D:**Data Stream **T:**Action Test **E:**Special Functions(E1 E2 E3 ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys_Info C:DTC--Read code & Clear code D:Data Stream T:Action Test E:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: 3.Sys. Info. C.DTC->Read code & Clear code D.Data Stream I.Action Test F-Special Functions(*), F2, F3, F4, F5, F6, F7, F8, F9

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK FCU TYPE CI UCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys_Info C:DTC--Read code & Clear code D:Data Stream T:Action Test E:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

nce only

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream E:Action Test F:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: 3.Sys. Info. C.DTC->Read code & Clear code D.Data Stream I.Action Test F-Special Functions(*), F2, F3, F4, F5, F6, F7, F8, F9

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE C1 UCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

nce only

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note: For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream E:Action Test F:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List

(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....) F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mtr (*) F8:DTC&SRT CONFIRMATION																																															
HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF																																															
Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT
FAIRL ADY Z	Z34	2008	SC	D	T																																										
		2009	F1	SC	SC																																										
		2010	F2	D	D	SC				SC	D		SC	D		SC	D	T																													
			F3	F1	T	D		SC		T	SC	D		SC	D	T	F2																														
			F4	F2	F1	T		CD		F2	SC	D		SC	D	T	F3																														
			F7	F3	F2	F2		CD		F3	F1	F3	F3	F3	F3	F2	F3																														
FAIRL ADY Z	Z33	2002	SC	D	T		SC																																								
		2003	F1	SC	D																																										
		2004	F2	D	T	SC																																									
		2005	F3	F1	F1	D				SC	D	SC	D	SC	D	T	T	F1																													
		2007	F4	F2	F2	T		SC	SC	F2	D	D	D	SC	D	T	F2	F1																													
			F7	F3	F3	F1		CD	SC	D	D	D	D	SC	D	T	F2	F7	CD	T	D	SC	D	T	SD	SD	T	F2	T	T	SC	D	F2														
FAIRL ADY Z	HZ34	2009	SC	D	T																																										
		2010	F1	SC	SC																																										
			F2	D	D	SC				SC	D	SC	D	SC	D	T	T	F2																													
			F3	F1	T	D		SC		T	SC	D	SC	D	T	T	F3																														
			F4	F2	F1	T		CD		F2	D	F2	D	SC	D	T	F2	F2																													
			F7	F3	F2	F2		CD		F3	F1	F3	F3	F3	F3	F2	F2	F2	CD	T	D	SC	D	T	SD	SD	T	F2	T	T	SC	D	F2														
FUGA	Y51	2009	SC	D	T		SC																																								
			F1	SC	D																																										
			F2	D	T	SC				SC	SC	D	D	SC	D	T	T	F2																													
			F3	F1	D			SC		T	D	F2	SC	D	T	T	F3	F3																													
			F4	F2	F2	T		SC		D	F2	F2	D	SC	D	T	T	F2	F3																												
			F7	F3	F3	F2		CD		F3	F1	F3	F3	F3	F3	F2	F2	F2	CD	F2	F2	D	SC	D	T	F3	F3	SC	D	T	T	SC	D	F2													

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream E:Action Test F:Special Functions(E1, E2, E3, ...)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3.....)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device CGC:CHG COMM TETC:TK ECU TYPE CLUCH DC:DISTANCE CONTROL MA:MOTOR ASSIST IVMS:Integrated Voice-Messaging System TOC:TORO CONT AP:ACCELE PEDAL CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

nce only

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys_Info C:DTC--Read code & Clear code D:Data Stream E:Action Test F:Service Request

Special Functions(E1 E2 E3 ...)

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream I:Action Test F:Special Functions(F1, F2, F3,...)
E1,E2,action test(t) E2,WdL,Clear(t), E2,FwdL,Forw(t), E1,IDL,ALR,VOL,LEARNT(t), E5,Call,Bit,(t), E5,Call,Disp,(t), E7,C,Bit,(t)

F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION:

ILLUSTRATION: S:Sys. Info C:DTC--Read code & Clear code D:Data Stream I:Action Test F:Special Functions(F1, F2, F3,...)
E1,E2,action test(t) E2,WdL,Clear(t) E2,FwdL,Forw(t) E1,IDL,ALR,VOL,LEARNT(t) E5,Call,Bit(t) E5,Can,Disp(t) E7,C,Disp,S

F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S: Sys. Info C:DTC-Read code & Clear code D:Data Stream

T:Action Test E:Special Functions(E1 E2 E3)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream I:Action Test F:Special Functions(F1, F2, F3,...)

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK ECU TYPE , CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TOC:TOBO CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE POOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....) F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mtr (*) F8:DTC&SRT CONFIRMATION																																															
HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF																																															
Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT
MAXI MA/C EFIGO	J31	2003	SC	D	T	SC	F1	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			D	T	SC	F1	F2	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F3	F1	F1	D	F4	F2	F2	T	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F5	F1	F1	D	F6	F2	F2	T	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
		2005	F7	F3	F3	F1	F8	F7	F7	F2	CD	SC	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F8	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F9	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F10	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
MAXI MA/C EFIGO	A33	1999	SC	D	T	SC	F1	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			D	T	SC	F1	F2	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F3	F1	F1	D	F4	F2	F2	T	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F5	F3	F3	F1	F6	SC	SC	D	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
		2005	F7	F7	F3	F1	F8	F7	F7	F2	CD	SC	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F8	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F9	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F10	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
NAVA RA(SP A)	D40	2005	SC	D	T	SC	F1	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			D	T	SC	F1	F2	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F3	F2	F2	F1	F4	SC	SC	D	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F5	F2	F2	F1	F6	SC	SC	D	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
		2006	F7	F7	F3	F1	F8	F8	F7	F2	CD	SC	D	T	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F8	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F9	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F10	F7	F7	F2	CD	SC	D	SC	F3	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
NAVA RA(TH I)	D40	2007	SC	D	T	SC	F1	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			D	T	SC	F1	F2	SC	D	SC	F2	D	T	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F3	F1	F1	SC	F4	SC	D	SC	D	T	SC	SC	SC	SC	SC	SC	SC	SC	SC	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT	
			F5	F2	F2	D	F6	SC	D	SC	D	T																																			

Nissan V41.80 Diagnostics List (Note:For reference only)

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device . CGC:CHG COMM . TETC:TK ECU TYPE CLUCH . DC:DISTANCE CONTROL . MA:MOTOR ASSIST . IVMS:Integrated Voice-Messaging System . TQC:TORQ CONT . AP:ACCELE PEDAL . CON:CONVERTIBLE ROOF

Nissan V41.80 Diagnostics List (Note:For reference only)

Note:For reference only

(*):Tested:

(?): Manual on website (www.x431.com)

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.