

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
N Series Truck	Engine	4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting		
		4JJ1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting		
		4HV1<CNG>			√	√	√	√	ECM DTC reading value	√	
		4HK1/4JJ1 <C/Rail_Euro2>			√	√	√	√	Fuel Supply Pump Learn Resetting	√	
		4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√	
		4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√	
		4JH1-TC Bosch			√	√	√	√		√	
		4JJ1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√	
		Idle stop <BCM>			√	√	√			√	
Hybrid System			√	√	√			√			

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Chassis	ABS/ASR			√	√	√	√		
		Transmission	AT A460			√	√	√	√		
			Smoother / Smoother-Ex			√	√	√			√
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
			4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
F&G Series Truck		Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim		
			4HK1/6HK1 <C/Rail_Euro2>			√	√	√	√	Reset fuel pump correction	√	
			4HK1/6HK1 <C/Rail_Euro3>				√	√	√	√	Reset fuel pump correction	√
			4HK1-TC <C/Rail_NLT>				√	√	√	√	F0:Correction dataF1: Reset fuel pump correction	√
			6HK1-TC <C/Rail_NLT>					√	√	√	F0:Correction dataF2: Reset fuel pump correction	√
			Idle stop <BCM>					√	√	√		√
			6UZ1-TC <C/Rail_Euro3>						√	√	√	
		Body	Immobiliser		√	√	√	√			1. VIN Programming	
			Airbag				√	√	√			
			Vehicle Body Control Module					√	√	√		√
		Chassis	ABS 6		√	√	√	√				

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2011		Information System	MIMAMORI		√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record		
			Speedometer Control Equipment				√				
		Transmission	Smoother / Smoother-Fx			√	√	√			
			Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	
C&E Series Truck	Engine	6WG1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim		
		6WG1-TC (C/Rail_NLT)		√	√	√	√	√			
		6UZ1-TC <C/Rail_NLT>		√	√	√	√	√			
		Body	Drive security reference		√	√	√	√	√		
	Chassis	Air Suspension		√	√	√	√	√			
		ABS/IESC		√	√	√	√				
		ESC(with EBS)		√	√	√	√				

Japanese Isuzu V15.10 Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
		Chassis	Hydraulic retarder		√	√	√	√				
			ABS 6		√	√	√	√				
			Millimeter wave radar cruise		√	√	√	√	√			
		Information System	MIMAMORI			√	√	√				
	LT/LV Series Bus	Engine	6HK1-TC (C/Rail)			√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
				6HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F2: Reset fuel pump correction	√
				6UZ1-TC <C/Rail_Euro3>			√	√	√	√		√
		Chassis	ABS 6		√	√	√	√				
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information		
		Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√		
	4HK1-TC <C/Rail_Tier3>				√	√	√	√	√			
	6HK1-TC <C/Rail_Tier3>				√	√	√	√	√			
	6UZ1-TC <C/Rail_Tier3>				√	√	√	√	√			
	6WG1-TC <C/Rail_Tier3>				√	√	√	√	√			
			2.4L LG1 Euro 3		√	√	√	√	√			
2.5L 4JK1-TC (Delphi)				√	√	√	√	√				

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
TF/UC Series		Engine	2.5L 4JK1-TC (TransTron)		√	√	√	√	√	1.VIN Programming 2.Fuel Supply Pump Learn Resetting 3.Injector Programming 4.Display Injector Codes	
			3.0L 4JJ1-TC (Delphi)		√	√	√	√	√		
			3.5L V6 6VE1 Hitachi		√	√	√	√			
			3.0L 4JJ1-TC (TransTron)		√	√	√	√	√	1.VIN Programming 2.Fuel Supply Pump Learn Resetting 3.Injector Programming 4.Display Injector Codes	
		V6 Engine		√	√	√	√	√			
		Transmission	AW30-40LE		√	√	√	√	√	1.VIN Programming	
			Automatic Transmission		√	√	√	√	√		
		Chassis	ABS		√	√	√	√			
		Body	Immobiliser (2.4L LG1 Euro3)		√	√	√	√			
			Immobiliser (Delphi)		√	√	√	√		1.VIN Programming	
			Immobiliser (Transtron)		√	√	√	√		1.VIN Programming	
			Immobiliser (V6 Engine)		√	√	√	√		1.VIN Programming	
			Airbag		√	√	√	√			
			Powertrain Interface Module		√	√	√	√		1.VIN Programming	
			Anti Theft Warning		√	√	√	√			
			4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1.VIN Programming 2.Fuel Supply Pump Learn Resetting 3.Injector Programming 4.Display Injector Codes 5.DPD Status Resetting	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
N Series Truck		Engine	4JJ1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			4HV1<CNG>			√	√	√	√	ECM DTC reading value	√
			4HK1/4JJ1 <C/Rail_Euro2>			√	√	√	√	Fuel Supply Pump Learn Resetting	√
			4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√
			4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			4JH1-TC Bosch			√	√	√	√		√
			4JJ1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			Idle stop <BCM>			√	√	√			√
		Hybrid System			√	√	√			√	
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Chassis	ABS/ASR			√	√	√	√		
		Transmission	AT A460			√	√	√	√		
			Smoother / Smoother-Ex			√	√	√			√

Japanese Isuzu V15.10 Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
		Engine	4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			4HK1/6HK1 <C/Rail_Euro2>			√	√	√	√	Reset fuel pump correction	√
		F&G Series	4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
2010	Truck		4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√	
			6HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F2: Reset fuel pump correction	√	
			Idle stop <BCM>			√	√	√			√	
			6UZ1-TC <C/Rail_Euro3>			√	√	√	√			
		Body	Immobiliser		√	√	√	√		1. VIN Programming		
			Airbag			√	√	√				
			Vehicle Body Control Module			√	√	√	√		√	
		Chassis	ABS 6		√	√	√	√				
		Information System	MIMAMORI				√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
			Speedometer Control Equipment						√			
		Transmission	Smoother / Smoother-Fx				√	√	√			
			Automatic Transmission		√	√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	

Japanese Isuzu **V15.10** Diagnostics List (Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
C&E Series Truck	Engine	6WG1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim		
		6WG1-TC (C/Rail_NLT)		√	√	√	√	√			
		6UZ1-TC <C/Rail_NLT>		√	√	√	√	√			
	Body	Drive security reference		√	√	√	√	√			
	Chassis	Air Suspension		√	√	√	√	√			
		ABS/IESC		√	√	√	√				
		ESC(with EBS)		√	√	√	√				
		Hydraulic retarder		√	√	√	√				
		ABS 6		√	√	√	√				
		Millimeter wave radar cruise		√	√	√	√	√			
Information System	MIMAMORI			√	√	√					

Japanese Isuzu V15.10 Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	LT/LV Series Bus	Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			6HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F2: Reset fuel pump correction	√
			6UZ1-TC <C/Rail_Euro3>			√	√	√	√		√
		Chassis	ABS 6		√	√	√	√			
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	
	Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			4HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6UZ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6WG1-TC <C/Rail_Tier3>		√	√	√	√	√		
	Engine	2.4L LG1 Euro 3		√	√	√	√	√			
		2.5L 4JK1-TC (Delphi)		√	√	√	√	√			
		2.5L 4JK1-TC (TransTron)		√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes		
		3.0L 4JJ1-TC (Delphi)		√	√	√	√	√			

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	TF/UC Series		3.5L V6 6VE1 Hitachi		√	√	√	√			
			3.0L 4JJ1-TC (TransTron)		√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes	
			V6 Engine		√	√	√	√	√		
		Transmission	AW30-40LE		√	√	√	√	√	1. VIN Programming	
			Automatic Transmission		√	√	√	√	√		
		Chassis	ABS		√	√	√	√			
		Body	Immobiliser (2.4L LG1 Euro3)		√	√	√	√			
			Immobiliser (Delphi)		√	√	√	√		1. VIN Programming	
			Immobiliser (Transtron)		√	√	√	√		1. VIN Programming	
			Immobiliser (V6 Engine)		√	√	√	√		1. VIN Programming	
			Airbag		√	√	√	√			
			Powertrain Interface Module		√	√	√	√		1. VIN Programming	
			Anti Theft Warning		√	√	√	√			
			4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
N Series Truck		Engine	4JJ1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			4HV1<CNG>			√	√	√	√	ECM DTC reading value	√
			4HK1/4JJ1 <C/Rail_Euro2>			√	√	√	√	Fuel Supply Pump Learn Resetting	√
			4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√
			4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			4JH1-TC Bosch			√	√	√	√		√
			4JJ1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			Idle stop <BCM>			√	√	√			√
		Hybrid System			√	√	√			√	
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Chassis	ABS/ASR			√	√	√	√		
		Transmission	AT A460			√	√	√	√		
			Smoother / Smoother-Ex			√	√	√			√

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
		Engine	4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			4HK1/6HK1 <C/Rail_Euro2>			√	√	√	√	Reset fuel pump correction	√
			4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√

F&G

Japanese Isuzu **V15.10** Diagnostics List (Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2009	Series Truck		4HK1-TC <C/Rail_NLT>		√	√	√	√	√	F0:Correction dataF1: Reset fuel pump correction	√
			6HK1-TC <C/Rail_NLT>		√	√	√	√	√	F0:Correction dataF2: Reset fuel pump correction	√
			Idle stop <BCM>		√	√	√				√
			6UZ1-TC <C/Rail_Euro3>		√	√	√	√			
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Chassis	ABS 6		√	√	√	√			
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
			Speedometer Control Equipment					√			
		Transmission									
			Smoother / Smoother-Fx				√	√	√		
			Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						Special Functions	Others
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation			
C&E Series Truck	Engine	6WG1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim			
		6WG1-TC (C/Rail_NLT)		√	√	√	√	√				
		6UZ1-TC <C/Rail_NLT>		√	√	√	√	√				
	Body	Drive security reference		√	√	√	√	√				
	Chassis	ABS/IESC		√	√	√	√					
		Air Suspension		√	√	√	√	√				
		ESC(with EBS)		√	√	√	√					
		Hydraulic retarder		√	√	√	√					
		ABS 6		√	√	√	√					
		Millimeter wave radar cruise		√	√	√	√	√				
	Information System	MIMAMORI			√	√	√					

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	LT/LV Series Bus	Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			6HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F2: Reset fuel pump correction	√
			6UZ1-TC <C/Rail_Euro3>			√	√	√	√		√
		Chassis	ABS 6		√	√	√	√			
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	
	Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			4HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6UZ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6WG1-TC <C/Rail_Tier3>		√	√	√	√	√		
Engine	Engine	2.4L LG1 Euro 3		√	√	√	√	√			
		2.5L 4JK1-TC (Delphi)		√	√	√	√	√			
		2.5L 4JK1-TC (TransTron)		√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes		
		3.0L 4JJ1-TC (Delphi)		√	√	√	√	√			

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
TF/UC Series			3.5L V6 6VE1 Hitachi		√	√	√	√			
			3.0L 4JJ1-TC (TransTron)		√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes	
			V6 Engine		√	√	√	√	√		
		Transmission	AW30-40LE		√	√	√	√	√	1. VIN Programming	
			Automatic Transmission		√	√	√	√	√		
		Chassis	ABS		√	√	√	√			
		Body	Immobiliser (2.4L LG1 Euro3)		√	√	√	√			
			Immobiliser (Delphi)		√	√	√	√		1. VIN Programming	
			Immobiliser (Transtron)		√	√	√	√		1. VIN Programming	
			Immobiliser (V6 Engine)		√	√	√	√		1. VIN Programming	
			Airbag		√	√	√	√			
			Powertrain Interface Module		√	√	√	√		1. VIN Programming	
			Anti Theft Warning		√	√	√	√			
		Engine		2.4L LG1 Euro 3		√	√	√	√	√	
2.5L 4JK1-TC (Delphi)				√	√	√	√	√			
2.5L 4JK1-TC (TransTron)				√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes		
3.0L 4JJ1-TC (Delphi)				√	√	√	√	√			
3.0L 4JJ1-TC (TransTron)				√	√	√	√	√	1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes		
V6 Engine				√	√	√	√	√			

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	TF/UC Series		2. XL L4 HV240		√	√	√				
			4JA1-TC Bosch		√	√	√	√	1. Program VIN		
			4JH1-TC Bosch		√	√	√	√	1. Program VIN		
			AT JR405E		√	√	√	√	1. Program VIN		
			AW30-40LE		√	√	√	√	1. Program VIN		
		Transmission	AW30-40LE	√	√	√	√	√	1. VIN Programming		
			Automatic Transmission	√	√	√	√	√			
			AT JR405E	√	√	√	√				
		Chassis	ABS	√	√	√	√				
			ABS 8		√	√	√	√			
			ABS (VPW)		√	√	√	√			
		Body	Immobiliser (2.4L LG1 Euro3)	√	√	√	√				
			Immobiliser (Delphi)	√	√	√	√		1. VIN Programming		
			Immobiliser (Transtron)	√	√	√	√		1. VIN Programming		
			Immobiliser (V6 Engine)	√	√	√	√		1. VIN Programming		
			Airbag	√	√	√	√				
			Powertrain Interface Module	√	√	√	√		1. VIN Programming		
			Anti Theft Warning	√	√	√	√				
			Airbag (VPW)		√	√	√				
		Airbag SIEMENS		√	√	√					
		4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting		

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
N Series Truck		Engine	4JJ1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			4HV1<CNG>			√	√	√	√	ECM DTC reading value	√
			4HK1/4JJ1 <C/Rail_Euro2>			√	√	√	√	Fuel Supply Pump Learn Resetting	√
			4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction	√
			4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			4JH1-TC Bosch			√	√	√	√		√
			4JJ1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
			Idle stop <BCM>			√	√	√			√
		Hybrid System			√	√	√			√	
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Chassis	ABS/ASR			√	√	√	√		
		Transmission	AT A460			√	√	√	√		
			Smoother / Smoother-Ex			√	√	√			√

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2008		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
		Engine	4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
			6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			4HK1/6HK1 <C/Rail_Euro2>			√	√	√	√	Reset fuel pump correction	√
	F&G			4HK1/6HK1 <C/Rail_Euro3>			√	√	√	√	Reset fuel pump correction

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	Series Truck		4HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction dataF1: Reset fuel pump correction	√
			6HK1-TC <C/Rail_NLT>			√	√	√	√	F0:Correction dataF2: Reset fuel pump correction	√
			Idle stop <BCM>			√	√	√			√
			6UZ1-TC <C/Rail_Euro3>			√	√	√	√		
		Body	Immobiliser		√	√	√	√		1. VIN Programming	
			Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
			Speedometer Control Equipment						√		
		Transmission									
			Smoother / Smoother-Fx			√	√	√			
			Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	C&E Series Truck	Engine	6WG1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			6WG1-TC (C/Rail_NLT)		√	√	√	√	√		
			6UZ1-TC <C/Rail_NLT>		√	√	√	√	√		
		Body	Drive security reference		√	√	√	√	√		
		Chassis	Air Suspension		√	√	√	√	√		
			Millimeter wave radar cruise		√	√	√	√	√		
		Information System	MIMAMORI			√	√	√			
		LT/LV Series Bus	Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim

Japanese Isuzu V15.10 Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
			6HK1-TC <C/Rail_NLT>		√	√	√	√	√	F0:Correction data F2: Reset fuel pump correction	√
			6UZ1-TC <C/Rail_Euro3>		√	√	√	√	√		√
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	
	Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			4HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6UZ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6WG1-TC <C/Rail_Tier3>		√	√	√	√	√		
	TF/UC Series	Engine	2.4L LG1 Euro 3		√	√	√	√	√		
			2.5L 4JK1-TC (Delphi)		√	√	√	√	√		
			3.0L 4JJ1-TC (Delphi)		√	√	√	√	√		
			V6 Engine		√	√	√	√	√		
			2. XL L4 HV240			√	√	√			
			4JA1-TC Bosch			√	√	√	√	1. Program VIN	
			4JH1-TC Bosch			√	√	√	√	1. Program VIN	
			AT JR405E			√	√	√	√	1. Program VIN	
		AW30-40LE			√	√	√	√	1. Program VIN		
		Transmission	AW30-40LE		√	√	√	√	√	1. VIN Programming	
			Automatic Transmission		√	√	√	√	√		
		Chassis	ABS		√	√	√	√			
			ABS 8			√	√	√	√		
			ABS (VPW)				√	√	√	√	
		Body		Immobiliser (2.4L LG1 Euro3)		√	√	√	√		
	Immobiliser (Delphi)				√	√	√	√		1. VIN Programming	
	Immobiliser (V6 Engine)				√	√	√	√		1. VIN Programming	
	Airbag				√	√	√	√			
	Powertrain Interface Module				√	√	√	√		1. VIN Programming	

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
			Anti Theft Warning		√	√	√	√			
			Airbag (VPW)			√	√	√			
			Airbag SIEMENS			√	√	√			
	N Series Truck	Engine	4HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
4JJ1-TC (C/Rail)				√	√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting	
4HV1<CNG>					√	√	√	√	√	ECM DTC reading value	√
4HK1-TC <C/Rail_NLT>					√	√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
4JH1-TC Bosch					√	√	√	√	√		
4JJ1-TC <C/Rail_NLT>					√	√	√	√	√	F0:Correction data F1: Reset fuel pump correction	√
Idle stop <BCM>					√	√	√	√	√		√

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
2007			Hybrid System			√	√	√			√	
		Body	Airbag			√	√	√				
			Vehicle Body Control Module			√	√	√	√			√
		Chassis	ABS/ASR			√	√	√	√			
		Transmission	AT A460			√	√	√	√			
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record		

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
F&G Series Truck		Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim	
			Idle stop <BCM>			√	√	√			√
			4HK1-TC <C/Rail_NLT>			√	√	√	√		
			6HK1-TC <C/Rail_NLT>			√	√	√	√		
		Body	Airbag			√	√	√			
			Vehicle Body Control Module			√	√	√	√		√
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information	
			Smoother / Smoother-Fx			√	√	√			
		Information System	MIMAMORI			√	√	√	√	1. ECM DTC data 2. DTC data except ECM 3. DCU Lock 4. MIMSMORI all data clear 5. MIMSMORI all DTC record clear 6. Engine DMU all data clear 7. TCM DMU all data clear 8. Forced engine DMU record 9. Forced TCM DMU record	
			Speedometer Control Equipment						√		

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
C&E Series Truck	Engine	6WG1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim		
		6WG1-TC (C/Rail_NLT)		√	√	√	√	√			
		6UZ1-TC <C/Rail_NLT>		√	√	√	√	√			
	Body	Drive security reference		√	√	√	√	√			
	Chassis	Air Suspension		√	√	√	√	√			
		Millimeter wave radar cruise		√	√	√	√	√			
	Information System	MIMAMORI			√	√	√				
LT/LV Series Bus	Engine	6HK1-TC (C/Rail)		√	√	√	√	√	DPD Normal Regeneration Control DPD Slow Regeneration Control 1. VIN Programming 2. Fuel Supply Pump Learn Resetting 3. Injector Programming 4. Display Injector Codes 5. DPD Status Resetting 6. Injector Quantity Trim 7. Display Injector Quantity Trim		
		6UZ1-TC <C/Rail_Euro3>			√	√	√	√		√	

Japanese Isuzu V15.10 Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
		Transmission	Automatic Transmission		√	√	√	√	√	1. Clear Adaptive to Fast+Base 2. Autodetect Information		
	Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√			
			4HK1-TC <C/Rail_Tier3>		√	√	√	√	√			
			6HK1-TC <C/Rail_Tier3>		√	√	√	√	√			
			6UZ1-TC <C/Rail_Tier3>		√	√	√	√	√			
			6WG1-TC <C/Rail_Tier3>		√	√	√	√	√			
2006	TF/UC Series	Engine	2.4L LG1 Euro 3		√	√	√	√	√			
			V6 Engine		√	√	√	√	√			
			2. XL L4 HV240			√	√	√				
			4JA1-TC Bosch			√	√	√	√	1. Program VIN		
			4JH1-TC Bosch			√	√	√	√	1. Program VIN		
			AT JR405E			√	√	√	√	1. Program VIN		
			AW30-40LE			√	√	√	√	1. Program VIN		
		Transmission	Automatic Transmission		√	√	√	√	√			
		Chassis	ABS		√	√	√	√				
			ABS (VPW)			√	√	√	√			
		Body	Immobiliser		√	√	√	√				
			Airbag		√	√	√	√				
			Powertrain Interface Module		√	√	√	√		1. VIN Programming		
			Anti Theft Warning		√	√	√	√				
			Airbag (VPW)			√	√	√				
		N Series Truck	Engine	4HV1<CNG>			√	√	√	√	ECM DTC reading value	√
				4HG1<LPG>			√	√	√	√		√
				4JG2<LPG>			√	√	√	√		√
4JG2					√	√	√	√				
4JH1-TC Bosch					√	√	√	√		√		
Hybrid System					√	√	√			√		

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions							
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others	
		Chassis	ABS/ASR		√	√	√	√				
		Transmission	Smoother/Smoother-E Auto Shift		√	√	√				√	
	<C*,E*,L*,F*> Heavy, Medium	Chassis	ABS ASR ADVICS		√	√	√	√			√	
		Off-Road Serial Industrial Engine	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√			
				4HK1-TC <C/Rail_Tier3>		√	√	√	√			
	6HK1-TC <C/Rail_Tier3>				√	√	√	√				
	6UZ1-TC <C/Rail_Tier3>				√	√	√	√				
	6WG1-TC <C/Rail_Tier3>				√	√	√	√				
	(TF/UC)LUV, Rodeo/Frontier, LAO-Rodeo	Powertrain		2.5L 4JK1-TC		√	√	√	√		1.ID Info(*) 2.Snap Shot(*)	√
				3.0L 4JJ1-TC		√	√	√	√		1.ID Info(*) 2.Snap Shot(*)	√
4JH1-T Denso					√	√	√	√				
2. XL L4 HV240					√	√	√					
4JA1-TC Bosch					√	√	√	√		1. Program VIN		
4JH1-TC Bosch					√	√	√	√		1. Program VIN		
AT JR405E					√	√	√	√		1. Program VIN		
AW30-40LE			√	√	√	√		1. Program VIN				
Chassis			ABS		√	√	√					
			ABS (VPW)		√	√	√	√				
			Body	Immobiliser (kwp D_MAX_IMMO)	√	√	√	√				
2005				Airbag		√	√	√				
				Airbag (VPW)		√	√	√				
	4HV1<CNG>				√	√	√	√		ECM DTC reading value	√	
	4HG1<LPG>				√	√	√	√			√	
			4JG2<LPG>		√	√	√	√		√		

Japanese Isuzu V15.10 Diagnostics List (Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actua tion	Special Functions	Others
	N Series Truck	Engine	4JG2		√	√	√	√			
			4JH1-TC Bosch		√	√	√	√			√
			MIMAMORI		√	√	√		1. Reading memory 2. Empty the memory 1. ECM function 2. Clear MIMAMORI data		
			Hybrid System		√	√	√				√
		Chassis	ABS/ASR		√	√	√	√			
		Transmission	Smoother/Smoother-E Auto Shift		√	√	√				
	<C*,E*,L*,F*> Heavy, Mediu	Transmission	AT Allison LCT		√	√	√	√			√
	Off-Road Serial Indust rial	Engine	4JJ1-TC <C/Rail_Tier3>		√	√	√	√	√		
			4HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
			6HK1-TC <C/Rail_Tier3>		√	√	√	√	√		
6UZ1-TC <C/Rail_Tier3>				√	√	√	√	√			
6WG1-TC <C/Rail_Tier3>				√	√	√	√	√			
Chassis		ABS ASR ADVICS		√	√	√	√				
(UE) Rodeo/ Amigo, Wizard /MU	Powertrain	3.2L V6 6VD1		√	√	√	√	√			
		3.2L V6 6VD1 Hitachi		√	√	√	√				
		4JG2		√	√	√	√				
	Chassis	ABS		√	√	√					
		Body	Immobiliser	√	√	√	√				
	Airbag			√	√	√					
	(TF/UC LUV.	Powertrain	2.5L 4JK1-TC		√	√	√	√	1.ID Info(*) 2.Snap Shot(*)		√
			3.0L 4JJ1-TC		√	√	√	√	1.ID Info(*) 2.Snap Shot(*)		√
			4JH1-T Denso		√	√	√	√			
			4JG2		√	√	√	√			
2. XL L4 HV240				√	√	√					

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2004	Rodeo/ Frontier, LAO- Rodeo		4JA1-TC Bosch		√	√	√	√	1. Program VIN		
			4JH1-TC Bosch		√	√	√	√	1. Program VIN		
			AT JR405E		√	√	√	√	1. Program VIN		
			AW30-40LE		√	√	√	√	1. Program VIN		
		Chassis	ABS		√	√	√				
			ABS (VPW)		√	√	√	√			
		Body	Immobiliser		√	√	√	√			
			Airbag		√	√	√				
			Airbag (VPW)		√	√	√				
			Airbag		√	√	√				
	<N*> ELF, NP R, NOR, VFR	Engine	4HF1<CNG>		√	√	√	√		√	
			4HG1<LPG>		√	√	√	√		√	
			4JG2<LPG>		√	√	√	√		√	
			4JG2		√	√	√	√			
			4JH1-TC Bosch		√	√	√	√		√	
			MIMAMORI		√	√	√		1. Reading memory 2. Empty the memory 1. ECM function 2. Clear MIMAMORI data		
			Hybrid System		√	√	√			√	
		Chassis	ABS/ASR		√	√	√	√			
		Transmission	Smoother/Smoother-E Auto Shift				√	√	√		√
<C*,E*, L*,F*> Heavy,		Transmission	AT Allison LCT		√	√	√	√		√	
	Chassis	ABS ASR ADVICS		√	√	√	√				
(UB) Trooper, Bighor	Powertrain	3.0L L4 4JX1		√	√	√	√				
		3.2L V6 6VD1		√	√	√	√				
		3.5L V6 6VE1		√	√	√					
	Body	AirBag		√	√	√					

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2003	(UE) Rodeo/ Amigo, Wizard /MU	Powertrain	3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
		Chassis	ABS		√	√	√				
		Body	AirBag		√	√	√				
	Immobiliser			√	√	√					
	(UP) Axiom	Powertrain	3.5L V6 6VE1		√	√	√				
		Chassis	ABS		√	√	√				
		Body	AirBag		√	√	√				
	(TF/UC) LUV, Rodeo/ Frontier, LAO- Rodeo	Powertrain	D-MAX (4JH1-T Denso)		√	√	√	√			
			2. XL L4 HV240		√	√	√	√			
			2. XL L4 HV240		√	√	√				
			4JA1-TC Bosch		√	√	√	√	1. Program VIN		
			4JH1-TC Bosch		√	√	√	√	1. Program VIN		
			AT JR405E		√	√	√	√	1. Program VIN		
			AW30-40LE		√	√	√	√	1. Program VIN		
		Chassis	ABS		√	√	√				
			ABS (VPW)		√	√	√	√			
		Body	Airbag		√	√	√				
	Airbag (VPW)			√	√	√					
	Airbag			√	√	√					
	<N*> ELF,NP R,NOR,	Engine	4JG2		√	√	√	√			
4JH1-TC Bosch				√	√	√	√		√		
<C*,E*, L*,F*> Heavy, Mini	Chassis	ABS/ASR		√	√	√	√				
	Transmission	AT Allison LCT		√	√	√	√				
(TBR)	Powertrain	2. XL L4 HV240		√	√	√	√				
(UB) Troope	Powertrain	3.0L L4 4JX1		√	√	√	√				
		3.2L V6 6VD1		√	√	√	√				

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2002	r, Bighor		3. 5L V6 6VE1			√	√	√			
		Body	AirBag			√	√	√			
	(UE) Rodeo/ Amigo, Wizard /MU	Powertrain	2. 2L L4 X22SE			√	√	√	√		
			3. 2L V6 6VD1			√	√	√	√		
			3. 5L V6 6VE1			√	√	√			
			3. 0L L4 4JX1			√	√	√	√		
		Chassis	ABS			√	√	√			
		Body	AirBag			√	√	√			
	(UP) Axiom	Powertrain	3. 5L V6 6VE1			√	√	√			
		Chassis	ABS			√	√	√			
		Body	AirBag			√	√	√			
	TF/UC Thailand	Powertrain	4JH1-T Denso			√	√	√	√		
	(TF/UC) LUV,Fr ontier, LAO- Rodeo	Powertrain	D-MAX(4JH1-T Denso)			√	√	√	√		
			4ZE1			√	√	√			
			2. 0L L4 SOHC			√	√	√	√		
			2. 2L L4 SOHC			√	√	√	√		
			3. 2L V6 6VD1 Hitachi			√	√	√	√		
			4JA1-TC Bosch			√	√	√	√	1. Program VIN	
			4JH1-TC Bosch			√	√	√	√	1. Program VIN	
			AT JR405E			√	√	√	√	1. Program VIN	
Body		AirBag			√	√	√				
<N*> ELF,NP R,NOR, VFR	Engine	4JH1-TC Bosch			√	√	√	√		√	
	Chassis	ABS/ASR			√	√	√	√			

Japanese Isuzu V15.10 Diagnostics List(Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
	<C*,E*,L*,F*> Heavy, Medium	Transmission	AT Allison LCT		√	√	√	√			
2001	(UB) Trooper, Bighorn	Powertrain	3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
			3.5L V6 6VE1		√	√	√				
		Body	AirBag		√	√	√				
	(UE) Rodeo/ Amigo, Wizard	Powertrain	2.2L L4 X22SE		√	√	√	√			
			3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
	/MU	Chassis	ABS		√	√	√				
		Body	AirBag		√	√	√				
	(UC) Frontier, LAO-	Powertrain	4ZE1		√	√	√				
			3.2L V6 6VD1 Hitachi		√	√	√	√			
		Body	AirBag		√	√	√				
	(TF) LUV	Powertrain	2.0L L4 SOHC		√	√	√	√			
			2.2L L4 SOHC		√	√	√	√			
			3.2L V6 6VD1 Hitachi		√	√	√	√			
4JA1-TC Bosch				√	√	√	√		1. Program VIN		
4JH1-TC Bosch				√	√	√	√		1. Program VIN		
	Body	AirBag		√	√	√					
TF/UC Thailand	Powertrain	D-MAX	4JH1-T Denso		√	√	√	√			
(TBR)	Powertrain	2.0L L4 SOHC		√	√	√	√				
		2.2L L4 SOHC		√	√	√	√				
<N*> ELF,NP	Engine	4JH1-TC Bosch		√	√	√	√			√	
	Chassis	ABS/ASR		√	√	√	√				

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
2000	<TF/UC> LUV, Rodeo/ Frontier,	Powertrain	3.2L V6 6VD1 Hitachi		√	√	√				
			4JA1-TC Bosch		√	√	√	√	1. Program VIN		
			4JH1-TC Bosch		√	√	√	√	1. Program VIN		
	<UG> V-Cross	Powertrain	3.2L V6 6VD1			√	√	√			
			3.5L V6 6VE1			√	√	√			
	(UB) Trooper, Righor	Powertrain	3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
			3.5L V6 6VE1		√	√	√	√			
	(UE) Rodeo/ Amigo, Wizard	Body	AirBag		√	√	√	√			
			Powertrain	2.2L L4 X22SE		√	√	√	√		
				3.0L L4 4JX1		√	√	√	√		
				3.2L V6 6VD1		√	√	√	√		
	(UG) V-Cross	Chassis	ABS		√	√	√	√			
		Body	AirBag		√	√	√	√			
	(UC) Frontier IAO-	Powertrain	3.2L V6 6VD1		√	√	√	√			
			3.5L V6 6VE1		√	√	√	√			
			Body	AirBag		√	√	√	√		
	(TF) LUV	Powertrain	4ZE1		√	√	√	√			
			3.2L V6 6VD1 Hitachi		√	√	√	√			
			Body	AirBag		√	√	√	√		
	(TBR)	Powertrain	2.0L L4 SOHC		√	√	√	√			
			2.2L L4 SOHC		√	√	√	√			
	<N*>EL	Chassis	ABS/ASR		√	√	√	√			
	<TF/UC>	Powertrain	3.2L V6 6VD1 Hitachi		√	√	√	√			
(UB) Trooper, Righor	Powertrain	3.0L L4 4JX1		√	√	√	√				
		3.2L V6 6VD1		√	√	√	√				
		3.5L V6 6VE1		√	√	√	√				
	Body	AirBag		√	√	√	√				

Japanese Isuzu **V15.10** Diagnostics List (Note: For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
1999	(UE) Rodeo/Amigo, Wizard/MU	Powertrain	2.2L L4 X22SE		√	√	√	√			
			3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
		Chassis	ABS		√	√	√				
	Body	AirBag		√	√	√					
	(UG) V-Cross	Powertrain	3.2L V6 6VD1		√	√	√	√			
			3.5L V6 6VE1		√	√	√				
		Body	AirBag		√	√	√				
	(UC)	Powertrain	3.2L V6 6VD1 Hitachi		√	√	√	√			
	(TF) LUV	Powertrain	2.0L L4 SOHC		√	√	√	√			
			2.2L L4 SOHC		√	√	√	√			
3.2L V6 6VD1 Hitachi				√	√	√	√				
(TBR)	Powertrain	2.2L L4 SOHC		√	√	√	√				
<N*>EL	Chassis	ABS/ASR		√	√	√	√				
<TF/UC	Powertrain	3.2L V6 6VD1 Hitachi		√	√	√					
1998	(UB) Trooper, Bighorn	Powertrain	3.0L L4 4JX1		√	√	√	√			
			3.2L V6 6VD1		√	√	√	√			
			3.5L V6 6VE1		√	√	√				
			40L30E		√	√	√				
	Body	AirBag		√	√						
	(UE) Rodeo/Amigo, Wizard/MU	Powertrain	2.2L L4 X22SE		√	√	√	√			
			3.0L L4 4JX1		√	√	√	√			
			40L30E		√	√	√				
			3.2L V6 6VD1		√	√	√	√			
	Chassis	ABS		√	√	√					
	Body	AirBag		√	√	√					
	Frontier, Laredo	PowerTrain	3.2L V6 6VD1 Hitachi		√	√	√				
			40L30E		√	√	√				
	(TF) LUV	Powertrain	2.0L L4 SOHC		√	√	√	√			
2.2L L4 SOHC				√	√	√	√				
3.2L V6 6VD1 Hitachi				√	√	√					
<TF/UC	Powertrain	3.2L V6 6VD1 Hitachi		√	√	√					
(TBR)	Powertrain	2.2L L4 SOHC		√	√	√	√				
(N*)	Body	Airbag SRS		√	√	√					

Japanese Isuzu **V15.10** Diagnostics List (Note:For reference only)

Year	Vehicle	Module	System	Sub System	Functions						
					Sys. Info.	Read DTC	Clear DTC	Data Stream	Actuation	Special Functions	Others
(*):Tested; (?):Manual on website(www.x431.com) Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.											

CONNECTOR	X431	DIAGUN	
OBD II -16	ALL SYSTEM	N/A	
Diagun connector	N/A	ALL SYSTEM	
SUPER -16	ALL SYSTEM	N/A	