

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A2	8Z	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		18 Aux heating	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi A3/S3	8L	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi A3/S3/Cabrio	8P	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		26 Electric roof control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi V26.85 Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		7D Auxiliary Heater	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
Audi 80/S2 B4	8C	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A4 B5	8D	25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi A4 B6/B7	8E	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03
		36 Driver's side seat adj.	B01,B02,B08,B05,S04,S10,B03
		37 Navigation	B01,B02,B08,B05,S04,S10,B03
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B03

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03
		56 Radio	B01,B02,B08,B05,S04,S10,B03
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B03
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03
		01 Engine electronics	B01,B02,B08,B05,S10,B03
		02 Transmission Electronics	B01,B02,B08,B05
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A4 B8	8K	17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		1B Power-Assisted Steering	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		36 Driver's side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3C Lane Departure Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,SLC,S16,BIS
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		5C Lane Keeping Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
Audi Cabrio B4	8G	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		26 Electric roof control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi Cabrio B6/B7	8H	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03
		15 Airbags	B01,B02,B08,B05,S04,S10,B03
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03
		26 Electric roof control	B01,B02,B08,B05,S04,S10,B03
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03
		37 Navigation	B01,B02,B08,B05,S04,S10,B03
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B03
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03
		56 Radio	B01,B02,B08,B05,S04,S10,B03
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03
		63 DRVS BOARDING ASS1	B01,B02,B08,B05,S04,S10,B03
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03
		73 DRVS BOARDING ASS2	B01,B02,B08,B05,S04,S10,B03
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B03
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03
Audi TT	8N	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List

(Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi TT	8J	02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		26 Electric roof control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		44 Steering assistance	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		4C Tyre Pressure Monitor II	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		7D Auxiliary Heater	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
Audi A5/S5	8T	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		1B Power-Assisted Steering	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3C Lane Departure Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		5C Lane Keeping Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A5/S5 Cab	8F	10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		1B Power-Assisted Steering	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		26 Electric roof control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3C Lane Departure Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		5C Lane Keeping Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16,BIS
Audi 100/200 C3	44	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi 100/A6 C4	4A	01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A6 C5	4B	16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		18 Aux heating	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		34 Self leveling suspension	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		35 Central Locking	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		36 Driver's side seat adj.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A6 C6	4F	0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		13 Distance control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		18 Aux heating	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		20 High Beam Assistance Device	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		28 Climate Control Unit Rear	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		34 Self leveling suspension	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		37 Navigation	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		3D Special Function	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		4C Tyre Pressure Monitor II	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		4F Electronic central electric II	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		56 Radio	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		5F Information Electronic Equipment 1	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		61 Battery control	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		76 Parking aid	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B09,B03,S07,S11L,SCA,B15
Audi A8 D2	4D	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		35 Central Locking	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		45 Interior Monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi V26.85 Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,SLC,S16
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,SLC,S16
		1D Driver identification	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi V26.85 Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi A8 D3	4E	28 Climate Control Unit Rear	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		34 Self leveling suspension	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		38 ROOF ELECTRONICS	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,SLC,S16
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		4E Control head RR	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		4F Electronic central electric II	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		5E Control head LR	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		5F Information Electronic Equipment 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		61 Battery control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		66 Seat-/mirror adjust.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi **V26.85** Diagnostics List (Note: For reference only)

MODEL	TYPE	SYSTEM	Functions
		75 Emergency call module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16
Audi Q5	8R	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		10 Parking Assist System 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		1B Power-Assisted Steering	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		20 High Beam Assistance Device	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		22 4WD Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		2E Media player position 3	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		30 Special Function 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		36 Driver's side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		3C Lane Departure Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		3D Special Function	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		53 Parking Brake	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		5C Lane Keeping Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		5F Information Electronic Equipment 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		05 ACCESS & PERMISSI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		06 PASSENE. SEAT ADJ.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		07 DISPLAY-/CNTL UNIT	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
Audi Q7	4L	08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		0E Media player position 1	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		0F Radio Tuner-Digital	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		13 Distance control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		18 Aux heating	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		1E Media player position 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		28 Climate Control Unit Rear	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		34 Self leveling suspension	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		36 Driver`s side seat adj.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		3C Lane Departure Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		4F Electronic central electric II	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		55 Headlight range control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		57 TV-TUNER	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		5C Lane Keeping Assistance System	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		61 Battery control	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		62 LR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		67 VOICE CONTROL	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		69 TRAILER FUNCTION	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6D Electronic Equipment of Trunk Lid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6F Confort Central Control Unit II	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		72 RR-DOOR ELECTRONI.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16
Audi R8	42	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi **V26.85** Diagnostics List (Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16
Audi R8 NAR	FG	01 Engine electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		02 Transmission Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		03 Brake Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		08 AC/Heating electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		09 Electronic Ctrl Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		11 Engine electronics 2	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		14 Wheel damping electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		15 Airbags	B01,B02,B08,B05
		16 Steering Wheel Electronics	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		17 Instrument Cluster	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		19 Gateway data bus	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		25 Immobilizer	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		37 Navigation	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		42 DRIVER-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		46 Central Control Module	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		47 Soundsystem	B01,B02,B08,B05,S04,S10,B03,S11C,S16

Audi V26.85 Diagnostics List (Note: For reference only)			
MODEL	TYPE	SYSTEM	Functions
		52 PASSE.-DOOR ELECT.	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		56 Radio	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		65 Tyre pressure monitoring	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		6C Rear Camera	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		76 Parking aid	B01,B02,B08,B05,S04,S10,B03,S11C,S16
		77 TELEPHONE	B01,B02,B08,B05,S04,S10,B03,S11C,S16

NOTE:

B01:01 Control Unit Info

B02:02 Read Fault Codes

B08:08 Measuring Blocks (Live Data)

B05:05 Clear Fault Codes

BIS:identification services

B15:15 Readiness

B09:09 Single Reading

B03:03 Output Tests

S04:04 Basic Settings

S10:10 Adaptation

S07:07 Code Module

S11L:11 Login

SCA:Chassis Number adjustment

S11C:11 code module

S16:16 Access permission

SLC:Long Code

Audi **V26.85** Diagnostics List

(Note:For reference only)

MODEL	TYPE	SYSTEM	Functions
-------	------	--------	-----------

(*):Tested;

(?):Manual on website(www.x431.com)

NOTE:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD