

LANDROVER V31.90 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM/ Gear box	ABS	RCM/ SRS/ Airbag	ICCM /IP	RE M/Air Susp ensio	BCM/ BOD Y	CHC M	HVA C/Air Condi tioni	VDCM	SAS M/St eerin g	TPM	PBM	PSC M	Parki ng assis t	Parki ng Aid	AHC M	VICM /Secu rity/I mmo	GWM	DDM	DSM	PDM	PSM	ATC M	TCC M/Tr ansfe r Box	ADC M	SCM	RDC M	Rain Sens or	RBC M	Light chec k/Lig hting	OCS	HCM	KVM				
Discovery II	1999- 2004	petrol m52	CDT V S1	DV	CDT V S8,S 9,S10	C														DV																			DV	
		Diesel TD5	CDT V S7	DV	CDT V S8,S 9, S10	C															DV																		DV	
Discovery III	2005- 2009	Petrol V6	CDV S14	CDV S14	CDV	CDV, S54	CDV S19	CDV S43, S44, S45 S104	CDV S15, S16, S17		CDV	CDV S23	CDV S18	CDV, S55, S56	CDV S20, S21, S22, S24		CDV	CDV							CDV	CDV		CDV	CDV											
		Petrol V8	CDV S14	CDV S14	CDV	CDV, S54	CDV S19	CDV S43, S44, S45 S104	CDV S15, S16, S17		CDV	CDV S23	CDV S18	CDV, S55, S56	CDV S20, S21, S22, S24		CDV	CDV								CDV	CDV		CDV	CDV										
		Diesel V6	CDV S46, S52, S58, S58	CDV S14	CDV	CDV, S54	CDV S19	CDV S43, S44, S45 S104	CDV S15, S16, S17		CDV	CDV S23	CDV S18	CDV, S55, S56	CDV S20, S21, S22, S24		CDV	CDV									CDV	CDV		CDV	CDV									
2010- 2011		3.0L Diesel V6	CDV S46, S52, S58, S47, S74, S75, S76, S77, S81, S82	CDV S14	CDV S23, S35	CDV	CDV S19	CDV S43, S44, S45 S102 S104	CDV S55, S56, S59, S36, S63, S83		CDV S60, S79, S80	CDV S18	CDV S20, S21, S22, S24		CDV	CDV	CDV S84	CDV			CDV S37	CDV S39, S61	CDV S38		CDV	CDV		CDV	CDV						CDV S28	CDV, S66	CDV			
		2.7L Diesel V6	CDV S46, S52, S58, S47, S74, S75, S76, S77, S81, S82	CDV S14	CDV S23, S35	CDV	CDV S19	CDV S43, S44, S45 S102 S104	CDV S55, S56, S59, S36, S63, S83		CDV S60, S79, S80	CDV S18	CDV S20, S21, S22, S24		CDV	CDV	CDV S84	CDV				CDV S37	CDV S39, S61	CDV S38		CDV	CDV		CDV	CDV						CDV S28	CDV, S66	CDV		

LANDROVER V31.90 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM/ Gear box	ABS	RCM/ SRS/ Airbag	ICCM /IP	RCM/ Air Suspension	BCM/ BOD Y	CHC M	TCM/ Air Conditioning	VDCM	SAS M/St eerin g	TPM	PBM	PSC M	Parking assis t	Parking Aid	AHC M	VICM /Secu rity/I mmo	GWM	DDM	DSM	PDM	PSM	ATC M	TCC M/Tr ansfe r Box	ADC M	SCM	RDC M	Rain Sens or	RBC M	Light chec k/Lig hting	OCS	HCM	KVM		
Range Rover	2002	Petrol eng	CDT V S1	CDT V S1	CDT V	C					CD																											
	2002- 2005	diesel Engine	CDT V	CDT V	CDT V S11	CDV	CDV	CDT V S12, S13	CDV		CDV		CDV					CDV									CDV											CDV
		Petrol Engine	CDT V S1	CDT V	CDT V S11	CDV	CDV	CDT V S12, S13	CDV		CDV		CDV					CDV									CDV											
	2006	STR6 Diesel	CDV	CD		CDV	CDV S19	CDV S43, S44, S45 S102	C S16		CD	C	C	CDV, S55, S56		CDV S20, S21, S22, S24		CD	CD	CDV						CDV	CDV					C S15, S25	CDV S26, S27	CD	CDV S28			
		Petrol V8	CDV S14	CDV S14		CDV	CDV S19	CDV S43, S44, S45 S102	C S16		CD	CDV S23	CDV S18	CDV, S55, S56		CDV S20, S21, S22, S24		CD	CD	CDV						CDV	CDV					C S15, S25	CDV S26, S27	CD	CDV S28			
	2007- 2009	Petrol V8	CDV S14	CDV S14	CDV	CDV	CDV S19	CDV S43, S44, S45 S102	C S16		CD	CDV S23	CDV S18	CDV, S55, S56		CDV S20, S21, S22, S24		CD	CD	CDV						CDV	CDV					C S15, S25	CDV S26, S27	CD	CDV S28			
		Diesel V8	CDV	CDV S14	CDV	CDV	CDV S19	CDV S43, S44, S45 S102	C S16		CD	CDV S23	CDV S18	CDV, S55, S56		CDV S20, S21, S22, S24		CD	CD	CDV						CDV	CDV					C S15, S25	CDV S26, S27	CD	CDV S28			
	2010 - 2012	Diesel V8	CDV S46, S52, S58	CDV S14	CDV S23, S35	CDV	CDV S19	CDV S43, S44, S45 S102 S103 S104	CDV S55, S56, S59, S36, S63		CDV S60		CDV S18		CDV S20, S21, S22, S24		CDV			CDV			CDV S37	CDV S39	CDV S38	CDV	CDV	CDV	CDV	CDV	CDV			CDV S26, S27	CDV S28	CDV	CDV	
		Petrol V8	CDV S14, S62	CDV S14	CDV S23, S35	CDV	CDV S19	CDV S43, S44, S45 S102 S103 S104	CDV S55, S56, S59, S36, S63		CDV S60		CDV S18		CDV S20, S21, S22, S24		CDV			CDV			CDV S37	CDV S39	CDV S38	CDV	CDV	CDV	CDV	CDV	CDV			CDV S26, S27	CDV S28	CDV	CDV	
		Normal Aspirated Petrol V8	CDV S58	CDV S14	CDV	CDV	CDV	CDV S55, S56, S83, S89, S94	CDV S43 S102 S104		CDV		CDV S18		CDV S86, S87, S91, S92, S93		CDV S95	CDV		CDV		CDV S96	CDV	CDV	CDV	CDV	CDV	CDV	CDV	CDV			CDV S26, S27	CDV S28	CDV	CDV S66	CDV	

LANDROVER V31.90 Diagnostics List (Note:For reference only)

Model	Year	ENG TYPE	PCM	TCM/ Gear box	ABS	RCM/ SRS/ Airbag	ICCM /IP	RCM/ Air Suspension	BCM/ BOD Y	CHC M	TCM/ Air Conditioning	VDCM	SAS M/St eerin g	TPM	PBM	PSC M	Parki ng assis t	Parki ng Aid	AHC M	VICM /Secu rity/I mmo	GWM	DDM	DSM	PDM	PSM	ATC M	TCC M/Tr ansfe r Box	ADC M	SCM	RDC M	Rain Sens or	RBC M	Light chec k/Lig hting	OCS	HCM	KVM
S2:	Configuration											S56	Tire pressure monitor confirmation application																							
S3:	Calibration 'G' Sensor											S57	Security - Keyfob remote functionality																							
S4:	INTRUMENT PACK RENEWAL											S58	Oil service counter reset																							
S5:	Remote key(PLIP) programming											S59	Battery replacement																							
S6:	EKA display											S60	Evaporator and heater test																							
S7:	Read/Set Injector Grades											S61	Seat entry/exit enable																							
S8:	Suspension configuration											S62	Idle speed - Adjustment																							
S9:	SLS suspension calibration											S63	Valet mode reset																							
S10:	SLS transfer mode set											S64	Control module calibration																							
S11:	Steering column correction											S65	Fuel consumption units																							
S12:	Height recalibration											S66	Headlamp control module system calibration																							
S13:	Headlight calibration											S67	Message centre display contrast																							
S14:	Adaption clear											S68	Pilot correction learning																							
S15:	Rain sensor initialisation											S69	Pre-delivery inspection																							
S16:	Sliding roof module initialisation											S70	Pump replacement																							
S17:	Driver's memory seat calibration											S71	Speed limitation																							
S18:	Steering wheel angle sensor calibration											S72	Program keys																							
S19:	Service interval reset											S73	Boost pressure actuator replacement																							
S20:	Drive the parking brake to the mounting position.											S74	Exhaust gas recirculation valve																							
S21:	Driver the parking brake to the latching position.											S75	Throttle valve actuator																							
S22:	Longitudinal accelerometer sensor calibration											S76	Oxygen sensor																							
S23:	Brake bleed.											S77	Oxidation catalyst																							
S24:	Parking brake unjam procedure.											S78	Crash status reset																							
S25:	Rain sensor windshield setup											S79	Actuators end stop detection																							
S26:	Service mode enabled.											S80	Stepper motor initialisation																							
S27:	Service mode disabled											S81	Reset water in fuel detection																							
S28:	Seat cushion replacement.											S82	Turbine shut-off valve																							
S29:	Third button configuration											S83	Steering column calibration																							
S30:	Fuel prime routine.											S84	Auxiliary heater priming routine																							
S31:	Gear selector sensor calibration.											S85	Transmission control module oil counter reset																							
S32:	Lateral accelerometer calibration											S86	Parking brake pad replacement - Release to service position																							
S33:	Pressure sensor calibration											S87	Parking brake pad replacement - Exit maintenance mode application																							
S34:	Roll rate sensor calibration											S88	Rest of world - Service interval options																							
S35:	Yaw Rate sensor calibration											S89	Tire pressure monitor sensor identification display																							

